

Product No.	Description	Category
C11CA83331	Stylus S22	Consumer Printer
C11CA77311	Stylus Office B42WD	Consumer Printer
C11CA82331	Stylus SX125	Consumer Printer
C11CA47321	Stylus TX210	Consumer Printer
C11CA47331	Stylus TX219	Consumer Printer
C11CA80321	Stylus SX420W	Consumer Printer
C11CA80331	Stylus SX425W	Consumer Printer
C11CA79311	Stylus Office BX305F	Consumer Printer
C11CA78311	Stylus Office BX320FW	Consumer Printer
C11CA70321	Stylus SX525WD	Consumer Printer
C11CA69311	Stylus Office BX625FWD	Consumer Printer
C11CA74311	PX720WD	Consumer Printer
C11CA73311	Stylus Photo PX820FWD	Consumer Printer
C11CA45321	Stylus Photo T50	Consumer Printer
C11CA45341	Stylus Photo P50	Consumer Printer
C11C550024CR	Stylus Photo R800	Consumer Printer
C11C698321	Stylus Photo R1900	Consumer Printer
C11CA16305	Stylus Photo R2880	Consumer Printer
C11CA86311	Stylus Photo R3000	Consumer Printer
C11CA51321	Stylus Photo TX650	Consumer Printer
C11CA75311	Stylus Photo PX660	Consumer Printer
C11CA58321	Stylus Office T1100	Consumer Printer
C11C655041	Stylus Photo 1410	Consumer Printer
B11B200306	Perfection V33	Consumer Printer
B11B200316	Perfection V330 Photo	Consumer Printer
B11B189033	Perfection V500 Photo	Consumer Printer
B11B189081	Perfection V500 Office	Consumer Printer
B11B198033	Perfection V600 Photo	Consumer Printer
B11B178023	Perfection V700 Photo	Consumer Printer
B11B178071	Perfection V750 Pro	Consumer Printer
B11B168022CX	Expression 10000XL	Consumer Printer
B31B191003	P-6000	Consumer Printer
B31B192003	P-7000	Consumer Printer